



**EZI sensor**

**5.5 kg**

**6.0 kg**

**7.0 kg**

Front Load Washer

# Instruction Booklet

SWF85561

SWF85661

SWF10761

2 contents

The symbols you will see on some paragraphs of this booklet have the following meaning:



The warning triangle and/or the key words (Warning!, Caution!) emphasize information that is particularly important for your safety or correct functioning of the appliance.



The information marked with this symbol provides additional instructions and practical tips on the use of the appliance.



Tips and information about economical and ecological use of the machine are marked with this symbol.

Our contribution to the protection of the environment: we use environmentally friendly paper.

Contents

Safety information .....	3
Product description .....	5
Control panel .....	6
Use .....	7
Washing hints .....	13
International wash code symbols .....	16
Washing program.....	17
Care and cleaning .....	19
Troubleshooting.....	22
Technical data .....	26
Installation .....	27
Environment concerns .....	30

## Safety information



**In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.**

### General safety

- It is dangerous to alter the specifications or attempt to modify this product in anyway.
- During high temperature wash program the door glass may get hot. Do not touch it!
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using the appliance.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you overfill. Refer to the manufacturer's recommendations of quantities.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Do not use your washing machine to wash articles with whalebones, material without hems or torn material.
- Always unplug the appliance and turn off the water supply after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

### Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.

## 4 safety information

- After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber.
- Any electrical work required to install this appliance should be carried out by a qualified electrician.


## Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.
- Do not overload the appliance. See the relevant section in the user manual.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.

- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible.

## Child safety

- This washing machine is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin.

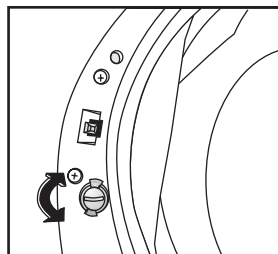

To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical.


## Product description

Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption.

**This program selector dial** combines the function of program and temperature selection, making it easier to set the program.

**The automatic cooling of the washing water** from 90° to 60°C before draining will prevent old drain pipes from being deformed.

**The balance control device** ensures the machine is stable during the spin.

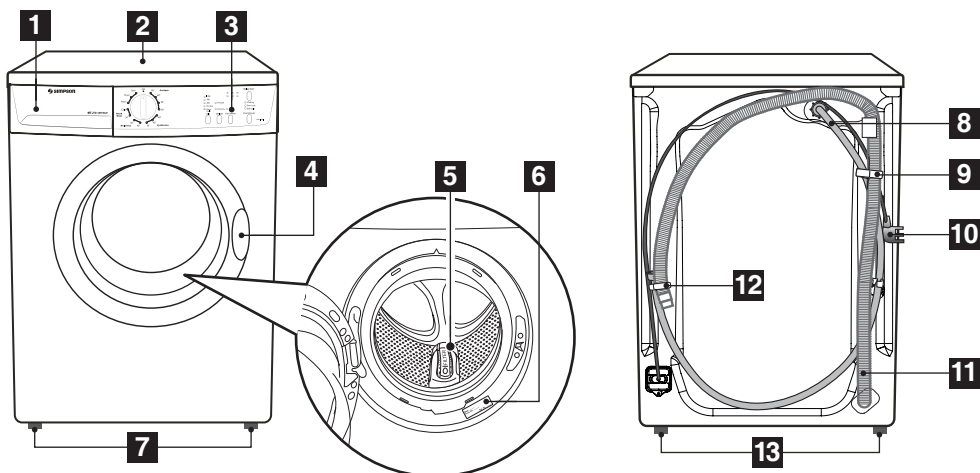

**1** Detergent Dispenser Drawer

**2** Worktop

**3** Control Panel

**4** Door Opening Handle

**5** Drain Filter

**6** Rating Plate

**7** Front Feet

**8** Water Inlet Hose

**9** Drain Hose Support

**10** Mains Cable




**11** Water Drain Hose


**12** Hose Holders

**13** Back Feet

## Detergent dispenser drawer

The detergent dispenser is divided into three compartments (fig.). The table of Washing Program shows which compartment to use.


- Compartment  : this compartment is only used for washing powder when a program has Prewash or Stain.
- Compartment  : this compartment is used for washing powder on all programs.
- Compartment  : this compartment is used for fabric conditioner and starching agent.

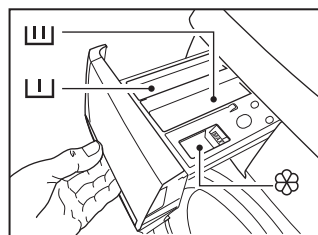

Always add laundry detergents before switching the machine on and keep the dispenser clean and dry, so that the detergent can be efficiently dispensed from the unit.

## 6 control panel

### Control panel

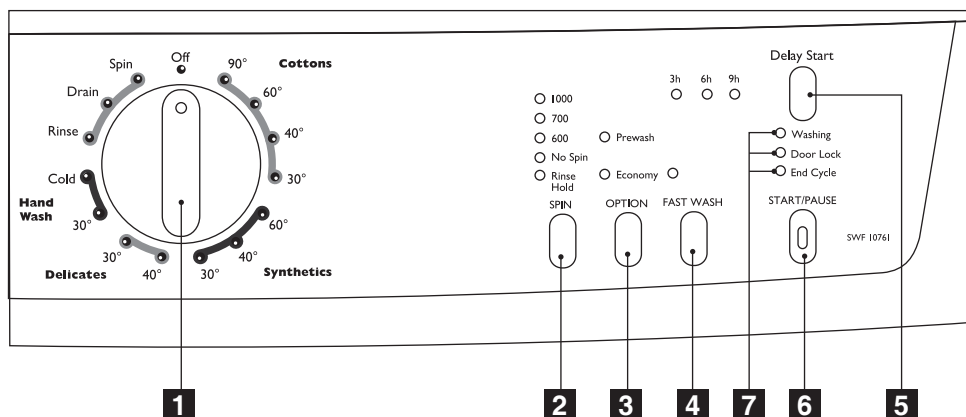

#### 1 Program selector dial

See page 8.

#### 2 Spin button

See page 8.

#### 3 Option button

See page 9.

#### 4 Fast Wash button

See page 10.

#### 5 Delay Start button

See page 10.

#### 6 Start/Pause button

See page 11.

#### 7 Program progress display

See page 11.



## Use


### First Use



- Ensure that the electrical and water connections comply with the installation instructions.
- Run a cotton cycle at 90 °C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the dispenser drawer and start the machine.

### Measure out the detergent and the fabric softener

Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment  and, if you wish to carry out the “**prewash**” phase, pour it into the compartment marked .

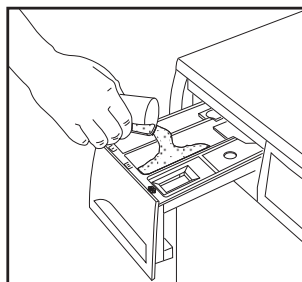



### Daily Use




#### Load the laundry

Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.

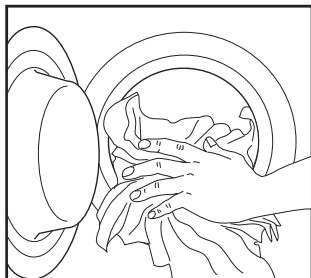


If required, pour fabric softener into the compartment marked  (the amount used must not exceed the “MAX” mark in the drawer). Close the drawer gently.

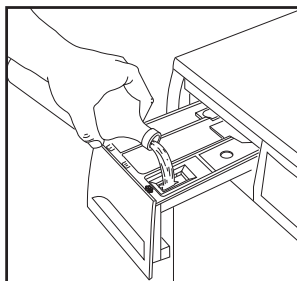

## Select the required program

Turn the program selector dial to the required program.

The green Start/Pause light starts to flash.

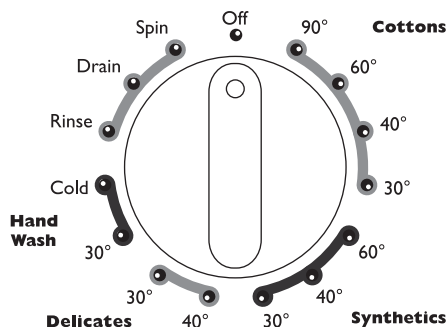

The selector dial is divided into following sections:

- Cottons
- Synthetics
- Delicates
- Hand Wash
- Rinse, Drain, Spin.

The selector dial can be turned either clockwise or anticlockwise. Position "Off" to Reset program/Switching OFF the machine.

**At the end of the program the selector dial must be turned to position "Off", to switch the machine off.**

## Attention!


If you turn the program selector dial to another program when the machine is working, the **red** Start/Pause pilot light will flash 3 times to indicate a wrong selection. The machine will not perform the new selected program.

## Program Option buttons

Depending on the program, different functions can be combined. These must be selected after choosing the desired program and before depressing the **Start/Pause** button.

When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

## Select the Spin Speed, No Spin or Rinse Hold option

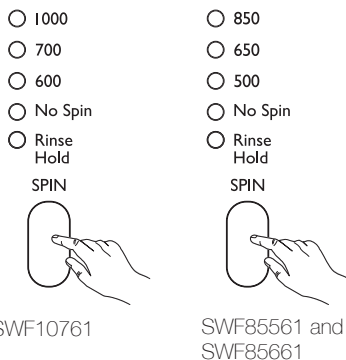

Press the Spin button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine.

The relevant light will light up. Maximum speeds are:

### For SWF10761

- Cottons and Hand Wash: **1000 rpm;**
- Delicates and Synthetics: **700 rpm.**

### For SWF85561 and SWF85661

- Cottons, Synthetics and Hand Wash: **850 rpm;**
- Delicates: **650 rpm.**



**No Spin:** by selecting this option, the machine will not spin the clothes after it drains the water at the last rinse.

**Rinse Hold:** by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. When the program has finished the pilot lights "**End Cycle**" and "**Door Lock**" are on, the Start/Pause and the "**Washing**" pilot light are off and the door is locked to indicate that the water must be emptied out.

### To empty out the water:

- turn the program selector dial to "**Off**".
- select the **Drain** or **Spin** program.
- reduce the spin speed if needed, by means of the relevant button
- depress **Start/Pause** button
- at the end of program, only the pilot light **End Cycle** comes on.


## Select the Prewash, Economy options

Press the Options button repeatedly, to select the desired option. The relevant light will light up.

☐ Prewash

☐ Economy

OPTION

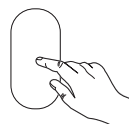

You can select 2 different options:

- **Prewash:** select this option if you wish your laundry to be prewashed at 30° C before the main wash.

**This option can be selected with only Cottons program.**


The Prewash ends with a short spin in program for cotton fabrics.

- **Economy:** select this option if you wish your laundry to be washed is slightly/normally soiled cottons. This program will obtain good washing results by saving energy.

**This option can be selected with program:**

- **Cottons 30°, 40°, 60° and 90° C**
- **Synthetics 30°, 40° and 60° C**

## Select the Fast Wash option

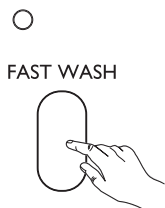

This option can be used for lightly soiled in order to obtain a good washing result in a short time.

### This option can be selected with program:


- **Cottons 30°, 40°, 60° and 90° C**
- **Synthetics 30°, 40° and 60° C**
- **Delicates 30° and 40° C**

The washing time will be reduced according to type of fabric and the selected temperature.

On cottons and synthetics program the rinses will be performed with more water.

If an option is chosen that is not allowed with the selected programme, the **red** pilot light of the **START/PAUSE** button will flash 3 times.

## Select the Delay Start

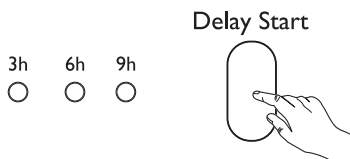

**Before you start the program**, if you wish to delay the start, press the Delay Start button repeatedly, to select the desired delay. The relevant light illuminates.

This option makes it possible to delay the starting of the washing program by 3, 6, and 9 hours.

You must select this option after you have set the program and before you press the Start/Pause button. You can cancel the delay time at any moment, before you press the Start/Pause button.

If you have already pressed the Start/Pause button, and you wish to cancel the delay time, proceed as follows:

- set the washing machine to PAUSE by pressing the Start/Pause button;
- press the Delay Start button once, the light relevant to the selected delay goes off.
- press the Start/Pause button again to start the programme.

### Important!

 
- The selected delay can be changed only after selecting the washing program again.
- The door will be locked throughout the delay time. If you need to open the door, you must first set the washing machine to PAUSE by pressing the Start/Pause button and then wait about 3 minutes.

After you have closed the door, press the Start/Pause button again.

- The Delay Start **can not** be selected with **Drain** programme.

## Select the Start/Pause

START/PAUSE



To start the selected program, press the **“Start/Pause”** button; the corresponding green pilot light stops flashing.

The **“Washing”** and **“Door Lock”** lights are on to indicate that the appliance starts operating and the door is locked.

To interrupt a program which is running, depress the **“Start/Pause”** button: the corresponding green pilot light starts to flash.

To restart the program from the point at which it was interrupted, **press** the **“Start/Pause”** button again.

If you have chosen a delayed start, the machine will begin the countdown.

## Program progress display

- ☐ Washing
- ☐ Door Lock
- ☐ End Cycle

After having pressed the **Start/Pause** button, the **“Washing”** pilot light comes on.

When the pilot light **“Washing”** comes on this means that the machine is performing the washing cycle.

The **“Door Lock”** pilot light indicates if the door can be opened:

- light on: the door cannot be opened.  
The appliance is running.
- light off: the door can be opened.  
The washing program is finished.

When the program has finished, the **“End Cycle”** pilot light comes on.

## Altering an option or a running program

It is possible to change any option before the program carries it out.

The option **“Fast Wash”** cannot be modified after the Start/Pause has been pressed.

Changing a running program is possible **only by resetting it**. Turn the program selector dial to **“Off”** and then to the new program position. The washing water in the tub not be emptied out. Start the new program by depressing the **“Start/Pause”** button again.

## Interrupting a program

Depress the **“Start/Pause”** button to interrupt a program which is running, the corresponding light starts to flash. Depress the button again to restart the program.

## Cancelling a program

Turn the selector dial to **“Off”** to cancel a program which is running. Now you can select a new program.

## Opening the door after the program has started

First set the machine to pause by pressing the **“Start/Pause”** button. If the **“Door Lock”** light flashes and after 3 minutes goes off, the door can be opened.

If the **“Door Lock”** light does not switch off, this means that the machine is already heating, that the water level is above the bottom edge of the door or that the drum is turning. In this case the door can not be opened.

If you can not open the door but you need to open it you have to switch the machine off by turning the selector dial to **“Off”**. After about 3 minutes the door can be opened (**pay attention to the water level and temperature!**).

## Washing hints



### Sorting the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

### Temperatures

<b>90°C</b>	for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...).
<b>40°C 60°C</b>	for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas...) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear).
<b>Cold 30°C</b>	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label pure new wool, machine washable, non-shrink.

### Before loading the laundry

Never wash whites and coloureds together. Whites may lose their "whiteness" in the wash.

New coloured items may run in the first wash; they should therefore be washed separately the first time.

### Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

Remove persistent stains before washing.

Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care. Remove hooks or tie them up in a bag or net.

### Maximum loads

Recommended loads are indicated in the programme charts. General rules:

<b>Cotton, linen:</b>	drum full but not too tightly packed;
<b>Synthetics:</b>	drum no more than half full;
<b>Delicate fabrics and woollens:</b>	drum no more than one third full.

Washing a maximum load makes the most efficient use of water and energy. For heavily soiled laundry, reduce the load size.

### Laundry weights

The following weights are indicative:

bathrobe	1200 g
napkin	100 g
quilt cover	700 g
sheet	500 g
pillow case	200 g
tablecloth	250 g
towels	200 g
tea cloth	100 g
night dress	200 g
ladies' briefs	100 g
man's work shirt	600 g
man's shirt	200 g
man's pyjamas	500 g
blouse	100 g
men's underpants	100 g

### Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

**Blood:** treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

**Oil based paint:** moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

**Dried grease stains:** moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

**Rust:** oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

**Mould stains:** treat with bleach, rinse well (whites and fast coloureds only).

**Grass:** soap lightly and treat with bleach (whites and fast coloureds only).

**Ball point pen and glue:** moisten with acetone (\*), lay the garment on a soft cloth and dab the stain.

**Lipstick:** moisten with acetone (\*) as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach.

**Red wine:** soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

**Ink:** depending on the type of ink, moisten the fabric first with acetone (\*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

**Tar stains:** first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

(\*) do not use acetone on artificial silk.

### Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.


Only low suds Front load washer detergents should be used in this appliance:

- powder detergents for all types of fabric.
- powder detergents for delicate fabrics (60 °C max) and woollens,
- liquid detergents, preferably for low temperature wash program (60 °C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash program.

If using concentrated powder or liquid detergents, a program **without** prewash must be selected.

Pour liquid detergent into the dispenser drawer compartment marked  **just before** starting the program.

Any fabric softener or starching additives must be poured into the compartment marked  before starting the wash program.

Follow the product manufacturer's recommendations on quantities to use and **do not exceed the MAX mark in the detergent dispenser drawer.**

**Do not spray stain pre-treatment products (e.g. Preen) on or near the machine, as it can attack plastic materials reducing its life.**

## **Quantity of detergent to be used**

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Water hardness is classified in so-called "degrees" of hardness.

Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.

Follow the product manufacturers' instructions on quantities to use.

### **Not enough washing powder causes:**

- the washload to turn grey,
- greasy clothes.

### **Too much washing powder causes:**

- sudsing,
- reduced agitation and washing effect,
- inadequate rinsing.













### **Use less detergent if:**




- you are washing a small load,
- the laundry is lightly soiled,
- large amounts of foam form during washing.






16 International wash code symbols

**i** International wash code symbols

These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry.

<b>Energetic wash</b>  	 Max.wash temperature 95 °C	 Max.wash temperature 60 °C	 Max.wash temperature 40 °C	 Max.wash temperature 30 °C	 Hand wash	 Do not wash at all
<b>Delicate wash</b>			 			

 <b>Bleaching</b>	 Bleach in cold water	 Do not bleach
---	---	--

 <b>Ironing</b>	 Hot iron max 200 °C	 Warm iron max 150 °C	 Lukewarm iron max 110 °C	 Do not iron
---	---	--	--	--

 <b>Dry cleaning</b>	 Dry cleaning in all solvents	 Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 & R 113	 Dry cleaning in petrol, pure alcohol and R 113	 Do not dry clean
--	---	--	---	---

 <b>Drying</b>	 Flat	 On the line	 On clothes hanger	 high temperature  low temperature	 Do not tumble dry
--	---	--	--	---	--



Washing program

Program/ Temperature	Type of laundry	Description of program	Options	Max. Load		
				SWF 10761	SWF 85661	SWF 85561
Cottons 90° C	White cotton (heavy soiled cotton items): e.g. sheets, tablecloths, towels, household linen.	- Main wash at 90° C - Rinses - Long spin	- Spin Red. - No Spin - Rinse Hold - Pre Wash - Economy - Fast Wash - Delay Start	7.0 kg	6.0 kg	5.5 kg
Cottons 60° C	Fast coloured cottons, normally soiled items, shirts, underwear.	- Main wash at 60° C - Rinses - Long spin	- Spin Red. - No Spin - Rinse Hold - Pre Wash - Economy - Fast Wash - Delay Start	7.0 kg	6.0 kg	5.5 kg
Cottons 40° C	Non fast coloured cotton lightly soiled, shirts, blouses, underwear.	- Main wash at 40° C - Rinses - Long spin	- Spin Red. - No Spin - Rinse Hold - Pre Wash - Economy - Fast Wash - Delay Start	7.0 kg	6.0 kg	5.5 kg
Cottons 30° C	Non fast coloured cotton lightly soiled, dirty use cloths.	- Main wash at 30° C - Rinses - Long spin	- Spin Red. - No Spin - Rinse Hold - Pre Wash - Economy - Fast Wash - Delay Start	7.0 kg	6.0 kg	5.5 kg
Synthetics 60° C	Synthetic or mixed fabrics, underwear, coloured garments, non-shrink shirts, blouses.	- Main wash at 60° C - Rinses - Short spin	- Spin Red. - No Spin - Rinse Hold - Economy - Fast Wash - Delay Start	2.5 kg	2.5 kg	2.0 kg
Synthetics 40° C		- Main wash at 40° C - Rinses - Short spin				
Synthetics 30° C	Synthetic or mixed fabrics, delicate items.	- Main wash at 30° C - Rinses - Short spin	- Spin Red. - No Spin - Rinse Hold - Economy - Fast Wash - Delay Start	2.5 kg	2.5 kg	2.0 kg

## 18 washing program

Program/ Temperature	Type of laundry	Description of program	Options	Max. Load		
				SWF 10761	SWF 85661	SWF 85561
Delicates 40° C	Delicate fabrics, for example curtains.	- Main wash at 40° C - Rinses - Short spin	- Spin Red. - No Spin - Rinse Hold - Fast Wash - Delay Start	2.5 kg	2.5 kg	2.0 kg
Delicates 30° C		- Main wash at 30° C - Rinses - Short spin				
Hand Wash 30° C	Special program for hand washing fabrics.	- Main wash at 30 °C - Rinses - Short spin	- Spin Red. - No Spin - Rinse Hold - Delay Start	2.0 kg	2.0 kg	1.0 kg
Hand Wash Cold	Special program for hand washing delicates cloths, handcurcheif.	- Main wash at cold - Rinses - Short spin	- Spin Red. - No Spin - Rinse Hold - Delay Start	2.0 kg	2.0 kg	1.0 kg
Rinse	Separate rinse cycle for hand washed items of cottons.	- Rinses - Long spin	- Spin Red. - No Spin - Rinse Hold - Delay Start	7.0 kg	6.0 kg	5.5 kg
Drain	For emptying out the last rinse water in program with the Rinse Hold.	- Draining of water	- No Spin	7.0 kg	6.0 kg	5.5 kg
Spin	Separate spin for cottons.	- Drain - Short spin	- Spin Red. - Delay Start	7.0 kg	6.0 kg	5.5 kg

\* Cottons 60 °C with “Economy”option selected is recommended for a full load of normally soiled cottons, and is the water and energy rating label program (in accordance with AS/NZS 2040:2005 & AS/NZS 6400:2500).

## Care and cleaning



You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

### After each wash

Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal.

### Maintenance Wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash:

- The drum should be empty of laundry.
- Select the hottest cotton wash program.
- Use a normal measure of detergent, must be a powder with biological properties.


### External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.


### Cleaning the dispenser drawer

The washing powder and additive dispenser drawer should be cleaned regularly.

Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder.

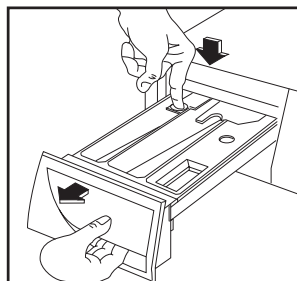

To aid cleaning, the top part of the additive compartment should be removed.

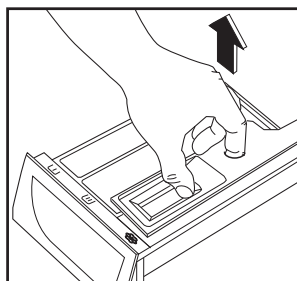


### Cleaning the drawer recess

Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess.

## 20 care and cleaning

Replace the drawer and run the rinse programme without any clothes in the drum.

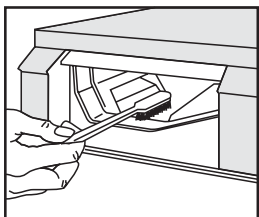


### Cleaning the drain filter


Drain filter collects lint and other items left in the dirty laundry to prevent pump blockage

The pump must be cleaned regularly. To clean the filter, proceed as follows:


- Turn programme selector dial to position Off.
- Unplug the appliance.
- Open the door.
- Turn the drum and align the filter cover (FILTER) with the arrow on the door seal.

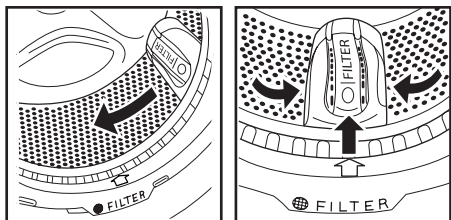


- Open the filter cover by pressing the special hook and by rotating the cover upwards.

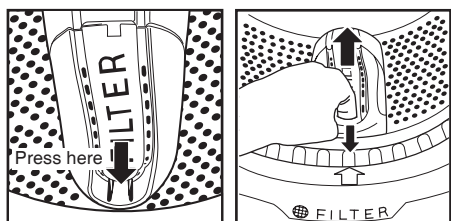


- Hold filter securely and pull upwards to remove it from its position.

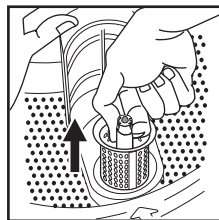


- Remove eliminate the eventual fluff or small objects around the filter.

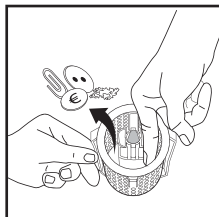

- Clean the filter under the water tap.

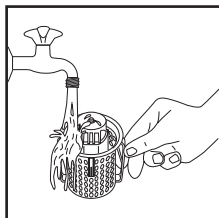


- After cleaning the filter, open the filter cover and insert the filter back to its position.

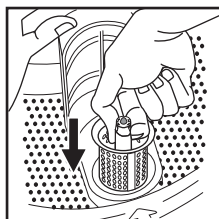


### **Important!**

**The filter is inserted correctly when the indicator on this top is visible and you will hear “Click” sound.**

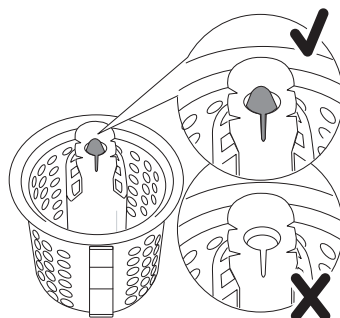

- close the filter cover.

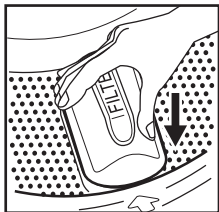

- insert the mains plug again.




**Do not start washing clothes without the filter in its place.**

## Cleaning the water inlet filter

If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.

It is therefore a good idea to clean it from time to time.

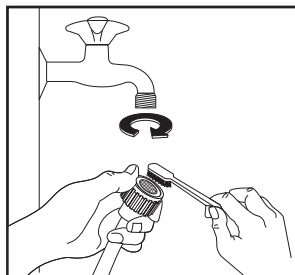

Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose.

## Troubleshooting

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the **red Start/Pause** pilot light flashes to indicate that the machine is not working.

Once the problem has been eliminated, press the **Start/Pause** button to restart the program. If after all checks, the problem persists, contact your local Service Centre.

Malfunction	Possible cause	Solution
The washing machine does not start:	• The door has not been closed. <b>(Red Start/Pause pilot light flashes)</b> .	• Close firmly the door.
	• The plug is not properly inserted in the power socket.	• Insert the plug into the power socket.
	• There is no power at the socket.	• Please check your domestic electrical installation.
	• The selector dial is not correctly positioned and the <b>Start/Pause</b> button has not been depressed.	• Please turn the selector dial and press the <b>Start/Pause</b> button again.
	• The delay start has been selected.	• If the laundry are to be washed immediately, cancel the delay start.
The machine does not fill:	• The water tap is closed. <b>(Red Start/Pause pilot light flashes)</b>	• Open the water tap.
	• The inlet hose is squashed or kinked. <b>(Red Start/Pause pilot light flashes)</b>	• Check the inlet hose connection.
	• The filter in the inlet hose is blocked. <b>(Red Start/Pause pilot light flashes)</b>	• Clean the water inlet hose filter.
	• The door is not properly closed. <b>(Red Start/Pause pilot light flashes)</b>	• Close firmly the door.
The machine fills then empties immediately:	• The end of the drain hose is too low.	• Refer to relevant paragraph in "water drainage" section.


Malfunction	Possible cause	Solution
The machine does not empty and/or does not spin:	<ul style="list-style-type: none"> <li>The drain hose is squashed or kinked. <b>(Red Start/Pause pilot light flashes)</b></li> </ul>	<ul style="list-style-type: none"> <li>Check the drain hose connection.</li> </ul>
	<ul style="list-style-type: none"> <li>The drain pump is clogged. <b>(Red Start/Pause pilot light flashes)</b></li> </ul>	<ul style="list-style-type: none"> <li>Clean the drain filter.</li> </ul>
	<ul style="list-style-type: none"> <li>The option <b>Rinse Hold</b> or <b>No Spin</b> has been selected.</li> </ul>	<ul style="list-style-type: none"> <li>Disable the option <b>Rinse Hold</b> or <b>No Spin</b></li> <li>Select spin programme.</li> </ul>
	<ul style="list-style-type: none"> <li>The laundry is not evenly distributed in the drum.</li> </ul>	<ul style="list-style-type: none"> <li>Redistribute the laundry.</li> </ul>
There is water on the floor:	<ul style="list-style-type: none"> <li>Too much detergent or unsuitable detergent (creates too much foam) has been used.</li> </ul>	<ul style="list-style-type: none"> <li>Reduce the detergent quantity or use another one.</li> </ul>
	<ul style="list-style-type: none"> <li>Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.</li> </ul>	<ul style="list-style-type: none"> <li>Check the water inlet hose connection.</li> </ul>
	<ul style="list-style-type: none"> <li>The drain hose is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Change it with a new one.</li> </ul>
Unsatisfactory washing results:	<ul style="list-style-type: none"> <li>Too little detergent or unsuitable detergent has been used.</li> </ul>	<ul style="list-style-type: none"> <li>Increase the detergent quantity or use another one.</li> </ul>
	<ul style="list-style-type: none"> <li>Stubborn stains have not been treated prior to washing.</li> </ul>	<ul style="list-style-type: none"> <li>Use commercial products to treat the stubborn stains.</li> </ul>
	<ul style="list-style-type: none"> <li>The correct temperature was not selected.</li> </ul>	<ul style="list-style-type: none"> <li>Check if you have selected the correct temperature.</li> </ul>
	<ul style="list-style-type: none"> <li>Excessive laundry load.</li> </ul>	<ul style="list-style-type: none"> <li>Introduce into the drum less laundry.</li> </ul>
The door will not open:	<ul style="list-style-type: none"> <li>The programme is still running.</li> </ul>	<ul style="list-style-type: none"> <li>Wait the end of washing cycle.</li> </ul>
	<ul style="list-style-type: none"> <li>The door lock has not been released.</li> </ul>	<ul style="list-style-type: none"> <li>Wait about 3 minute.</li> </ul>
	<ul style="list-style-type: none"> <li>There is water in the drum.</li> </ul>	<ul style="list-style-type: none"> <li>Select drain or spin programme to empty out the water.</li> </ul>

## 24 troubleshooting

Malfunction	Possible cause	Solution
The machine vibrates or is noisy:	<ul style="list-style-type: none"><li>• The transit bolts and packing have not been removed.</li></ul>	<ul style="list-style-type: none"><li>• Check the correct installation of the appliance.</li></ul>
	<ul style="list-style-type: none"><li>• The support feet have not been adjusted.</li></ul>	<ul style="list-style-type: none"><li>• Check the correct levelling of the appliance.</li></ul>
	<ul style="list-style-type: none"><li>• The laundry is not evenly distributed in the drum.</li></ul>	<ul style="list-style-type: none"><li>• Redistribute the laundry.</li></ul>
	<ul style="list-style-type: none"><li>• Maybe there is very little laundry in the drum.</li></ul>	<ul style="list-style-type: none"><li>• Load more laundry.</li></ul>
	<ul style="list-style-type: none"><li>• Unstable floors eg. wooden floors.</li></ul>	
Spinning starts late or the machine does not spin:	<ul style="list-style-type: none"><li>• The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and select the spin programme.</li></ul>	<ul style="list-style-type: none"><li>• Redistribute the laundry.</li></ul>
The machine makes an unusual noise:	<ul style="list-style-type: none"><li>• The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.</li></ul>	
No water is visible in the drum:	<ul style="list-style-type: none"><li>• Machines based on modern technology operate very economically using very little water without affecting performance.</li></ul>	



If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

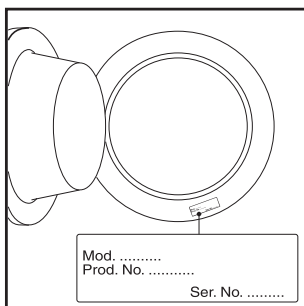

Technical data

Dimensions	Width	60 cm		
	Height	85 cm		
	Depth	54 cm		
Power supply voltage/frequency		220-240 V/50 Hz		
Total power absorbed		2000 W		
Minimum fuse protection		10A		
Water supply pressure	Minimum	0,05 MPa		
	Maximum	0,8 MPa		
Maximum Load		SWF10761	SWF85661	SWF85561
	Cottons	7.0 kg	6.0 kg	5.5 kg
	Synthetics	2.5 kg	2.5 kg	2.0 kg
	Delicates	2.5 kg	2.5 kg	2.0 kg
	Hand Wash	2.0 kg	2.0 kg	1.0 kg
Spin Speed	Maximum	SWF10761	SWF85661	SWF85561
		1000 rpm	850 rpm	850 rpm



## Installation




### Unpacking


All transit bolts and packing must be removed before using the appliance.

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.

1. Using a spanner, unscrew and remove the two rear bottom screws.

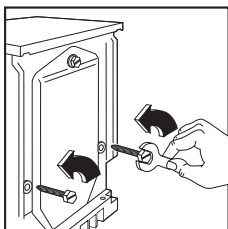


2. Slide out the two plastic pins.

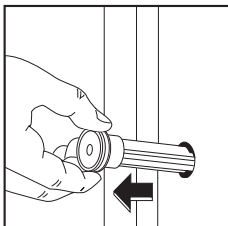


3. Lay the machine on its back ensuring that the hoses are not crushed.


Place one of the polystyrene angle packings under the machine.

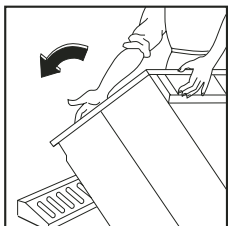


4. Remove the polystyrene block(s) protecting the motor

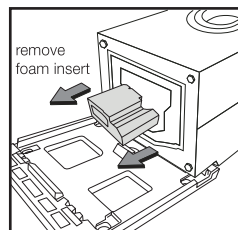

5. Very carefully slide out the polyethylene bag, removing it towards the downwards, then pull it out.  
**(If any)**

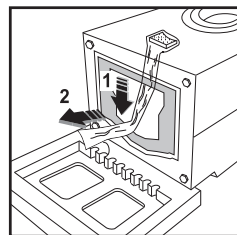


6. With the machine laid on it's back, place the bottom cover as marked in position A, Then push the other end of the cover as directed to close the bottom of washing machine  
**(This is available in selected models only).**

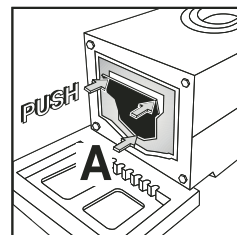

7. Set the machine upright and unscrew the remaining rear screw.


8. Slide out the relevant pin. Cover all the open holes with plugs which are provided with the Instruction booklet.

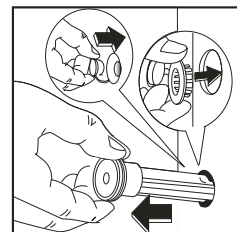

### Positioning

Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or cupboard units.

Carefully level by screwing the adjustable feet in or out.

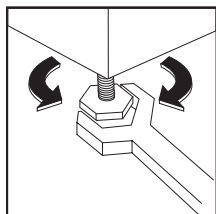

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.



### Water inlet

Connect the water inlet hose to a tap with 3/4" BSP thread.

Use the hose supplied with the washing machine. **DO NOT USE OLD HOSES.**

The other end of the inlet hose which connects to the machine can be turned in any direction.

Simply loosen the fitting, rotate the hose and retighten the fitting, making sure there are no water leaks.

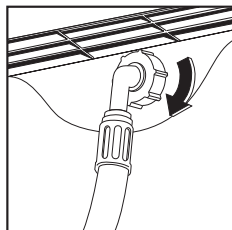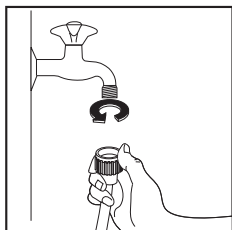


The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

### Water drainage

The end of the drain hose can be positioned in three ways:

**Hooked over the edge of a sink using the plastic hose guide supplied with the machine.**

In this case, make sure the end cannot come unhooked when the machine is emptying.

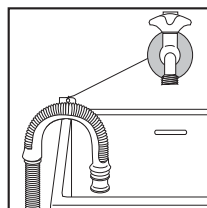


This could be done by tying it to the tap with a piece of string or attaching it to the wall.

**In a sink drain pipe branch.** This branch must be above the trap so that the bend is at least 60 cm above the ground.

**Directly into a drain pipe at a height** of not less than 60 cm and not more than 90 cm.

The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

The drain hose must not be kinked. Run it along the floor; only the part near the drainage point must be raised.

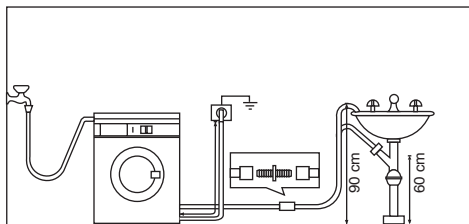

**For the correct functioning of the machine the drain hose must remain hooked on the proper support piece situated on the top part of back side of the appliance.**

## Electrical Connection

This machine is designed to operate on a 220-240 V, single-phase, 50 Hz supply.

**“An incorrect power supply may void your warranty.”**

Check that your domestic electrical installation can take the maximum load required (2.0 kW), also taking into account any other appliances in use.



**Connect the machine to an earthed socket.**

The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre.




## Important!

When the appliance is installed the power supply cable must be easily accessible. If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable device must be positioned so that it is not subject to splashing or ingress of moisture.

## Environment concerns

### Packaging materials



The materials marked with the symbol  are recyclable.

>PE<=polyethylene


>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### Old machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### Ecological hints



To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.



# Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: [FRONT LOAD WASHER]

**This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.**

## General Terms and Conditions

1. In this warranty
  - (a) 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
  - (b) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
  - (c) 'Warranty Period' means
    - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of 24 months and in New Zealand the period of 24 months;
    - (ii) where you use the Appliance for commercial purposes, in Australia the period of 3 months and in New Zealand the period of 3 months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
  - (d) 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty.

8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):

- (a) The Appliance is damaged by:
  - (i) accident
  - (ii) misuse or abuse, including failure to properly maintain or service
  - (iii) normal wear and tear
  - (iv) power surges, electrical storm damage or incorrect power supply
  - (v) incomplete or improper installation
  - (vi) incorrect, improper or inappropriate operation
  - (vii) insect or vermin infestation.
- (b) The Appliance is modified without authority from Electrolux in writing.
- (c) The Appliance's serial number or warranty seal has been removed or defaced.
- (d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.

9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

## Limitation of Liability

10. To the extent permitted by law:

- (a) Electrolux excludes all warranties other than as contained in this document;
  - (b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
    - (a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
    - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied;and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

## Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

## Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

<b>FOR SERVICE</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SERVICE CENTRE IN AUSTRALIA <b>Please call 13 13 49</b> <small>For the cost of a local call (Australia only)</small>	<b>SERVICE AUSTRALIA</b>  <b>Electrolux</b> ELECTROLUX HOME PRODUCTS	<b>FOR SPARE PARTS</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SPARE PARTS CENTRE IN AUSTRALIA <b>Please call 13 13 50</b> <small>For the cost of a local call (Australia only)</small>
<b>FOR SERVICE</b> OR TO FIND THE ADDRESS OF YOUR NEAREST AUTHORISED SERVICE CENTRE IN NEW ZEALAND <b>Free call 0800 10 66 10</b>	<b>SERVICE NEW ZEALAND</b>  <b>Electrolux</b> ELECTROLUX HOME PRODUCTS	<b>FOR SPARE PARTS</b> OR TO FIND THE ADDRESS OF YOUR NEAREST SPARE PARTS CENTRE IN NEW ZEALAND <b>Free call 0800 10 66 20</b>